

## BoaPod™


### Flexible Leg Tripod

Congratulations on selecting your new BoaPod™ flexible leg tripod! In order to achieve optimum performance, please follow instructions for proper use and care.



#### PRODUCT SPECIFICATION:


Max Load:	2.64 lbs.
Weight:	0.71 lbs.
Dimensions:	2.2" x 2.4" x 12.2"
Accessories:	Smartphone Adapter with Remote Shutter Button

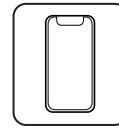

Smartphones



Cameras

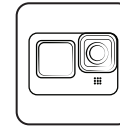


Action Cameras

#### SETTING UP BOAPOD™:


Make sure BoaPod is level and steady before attaching to an optic.

##### IMPORTANT:

- Do not exceed max load capacity of tripod.
- Make sure optic is securely fastened to tripod.
- Do not over-tighten locks as this may damage the locking mechanisms.
- Remove optic before adjusting, transporting or taking down your tripod.

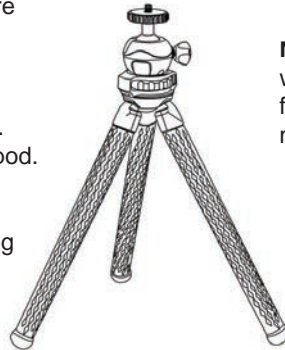


**Note:** BoaPod comes with a removable 360° fluid ball head and two mounting locations.

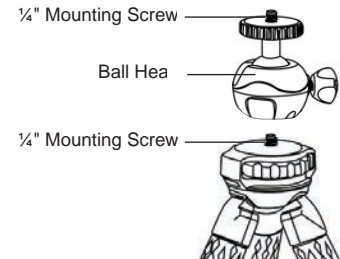


#### ATTACHING SMARTPHONE ADAPTER TO BALL HEAD:


1. Pull open smartphone adapter and attach to back of phone.

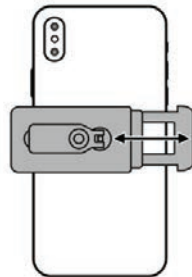


2. Attach adapter to mounting screw and tighten.

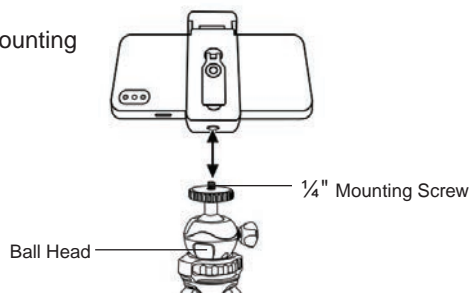

3. To adjust position of smartphone: Turn tilt lock counter-clockwise to loosen, rotate ball head arm, then tighten.

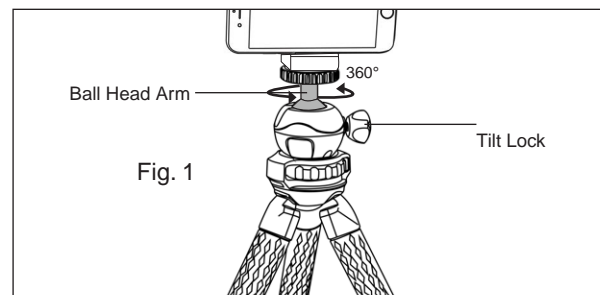


4. Phone can be attached in landscape (Fig. 2) or portrait position (Fig. 3).

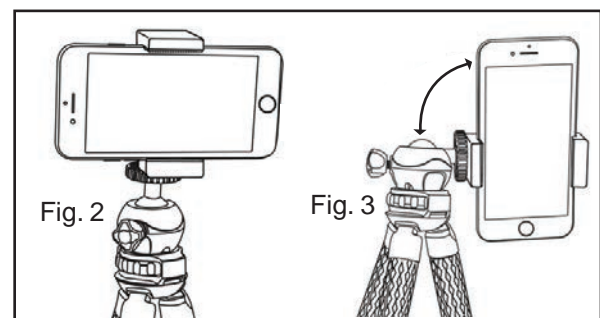


## ATTACHING CAMERA TO BALL HEAD:


1. Attach camera to mounting screw and tighten.

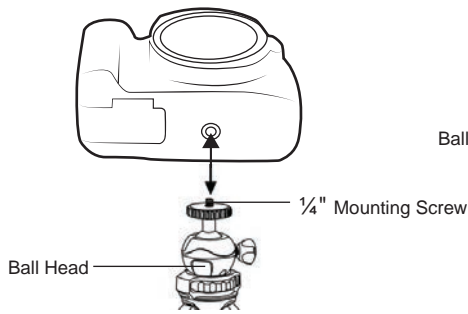

2. To adjust position of camera: Turn tilt lock counterclockwise to loosen, rotate ball head arm, then tighten.

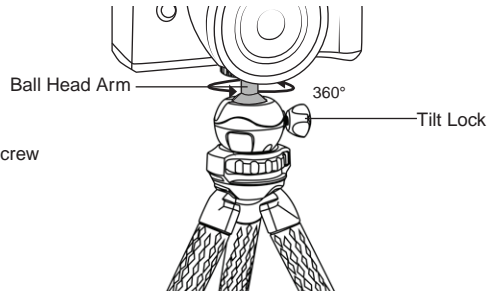


3. Camera can be attached in landscape or portrait position.

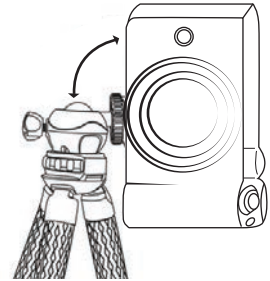


## REMOVING BALL HEAD:

For use without 360° rotatable ball head: Remove ball head by twisting counterclockwise. Attach camera directly to alternate mounting screw on tripod. Turn wheel lock counterclockwise to secure camera (Fig. 4). To remove, turn clockwise.

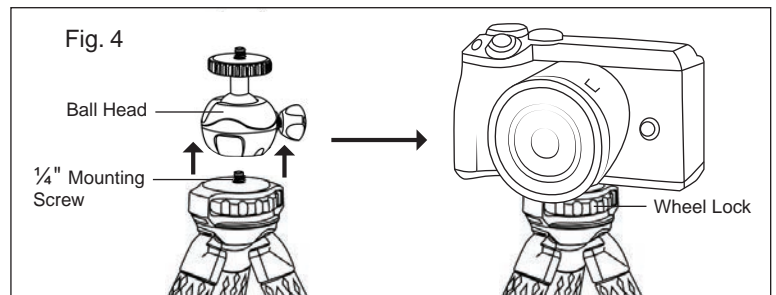


## USING BOAPOD:


1. The BoaPod can be set up as a traditional tripod.

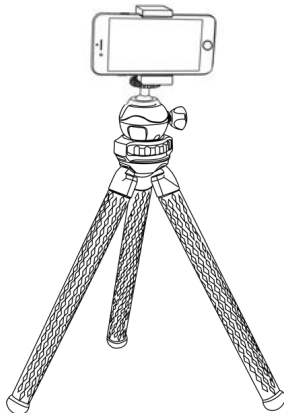

2. Wrap flexible tripod legs around a pole or branch, hang from a fence or place on an uneven surface (Fig. 5-6).

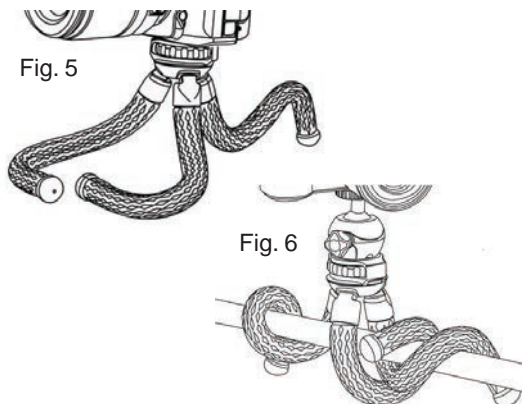



3. The flexible legs can also be positioned to become a table stand for a tablet or book.

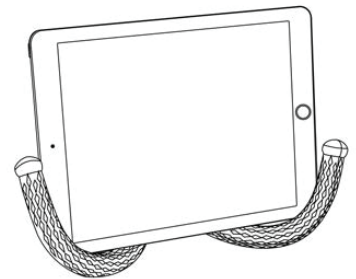


## USING REMOTE SHUTTER BUTTON:

Enable Bluetooth function on your smartphone. Use On/Off switch on the side of the remote shutter button to turn on. A light will flash to indicate it's on. A code will pop up on your smartphone "My Devices" list. Select connect. Remote will now act as the shutter button for your smartphone. To take photos, press camera icon. To take a quick video, press and hold camera icon until done. For longer videos, switch to video mode on your smartphone and press camera icon to start/stop video. Shutter button comes with CR2032 lithium battery installed and ready to use. Turn off remote to conserve battery when not in use.

If your remote shutter button does not have an on/off switch, press and hold center button till light flashes. A code will pop up on your smartphone "My Devices" list. Select connect. Remote will now act as the shutter button for your smartphone. To take photos, press camera icon. To take videos, switch to video mode on your smartphone and press camera icon to start/stop video. Shutter button comes with CR2032 lithium battery installed and ready to use. To turn off, hold center button till light flashes.

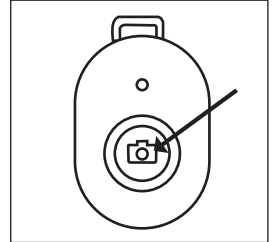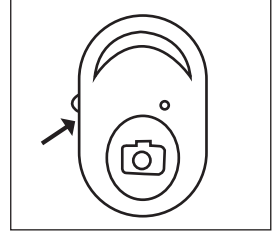

**Customer Service:** If you experience any difficulties, please contact us and we will be happy to help you.

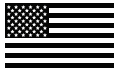

✉ info@carson.com



✉ uksupport@carson.com



✉ eusupport@carson.com

For warranty information, visit [www.carson.com/warranty](http://www.carson.com/warranty)

[www.carson.com](http://www.carson.com)

Carson Optical 2070 5th Avenue, Ronkonkoma, NY 11779 | Tel: 631-963-5000