
CARSON[®] LIGHTED MAGNILOOK[™]

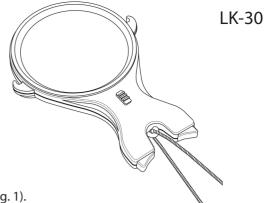


2.5x / 4.5x LED LIGHTED HANDS-FREE MAGNIFIER

Instructions for use:


To Activate LED Light

To turn light on, slide switch located on top of magnifier handle up (Fig. 1). **Note:** Please remove battery tab before first use.




To Use Hands Free

Place strap around neck and adjust length as desired. Loop strap under hooks on each side of magnifier rim. Rest rubber tips on bottom of magnifier against chest (Fig. 2-3).

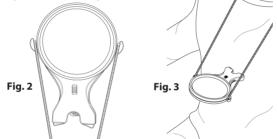

Replacing Batteries

Locate battery door on bottom of handle. Remove safety screw and pull back battery door (Fig. 4-5). Pull ribbon to remove spent batteries (Fig. 6) and replace with three fresh G-3 button cell batteries according to polarity indicators marked on bottom of battery compartment (Fig. 7). Make sure ribbon is placed under batteries for easy removal. Replace battery door and safety screw.



Warning: Use only alkaline batteries. Mixing old and new, different brands or types within brands may cause batteries to leak, overheat or explode. Keep away from fire or excessive heat. Inspect batteries for corrosion or leakage. Insert in direction indicated. Rechargeable batteries not recommended.

Cleaning Your Magnifier

Clean lens with a soft, clean microfiber cloth by rubbing gently in a circular motion. Moisten the lens cloth with water if needed. Do not use harsh chemicals, solvents or abrasives as they may damage the lens.

CAUTION - FIRE HAZARD:

Keep magnifier away from direct sunlight to prevent accidental fire.

Customer Service:

If you experience any difficulties, please contact us and we will be happy to help you.

In the U.S.A.	In the U.K.	In the E.U.
Phone: 1-631-963-5000	Phone: +44 (0) 1938 557440	Phone: +44 (0) 1938 557440
Email: info@carson.com	Email: uksupport@carson.com	Email: eusupport@carson.com

For warranty information, visit www.carson.com/warranty